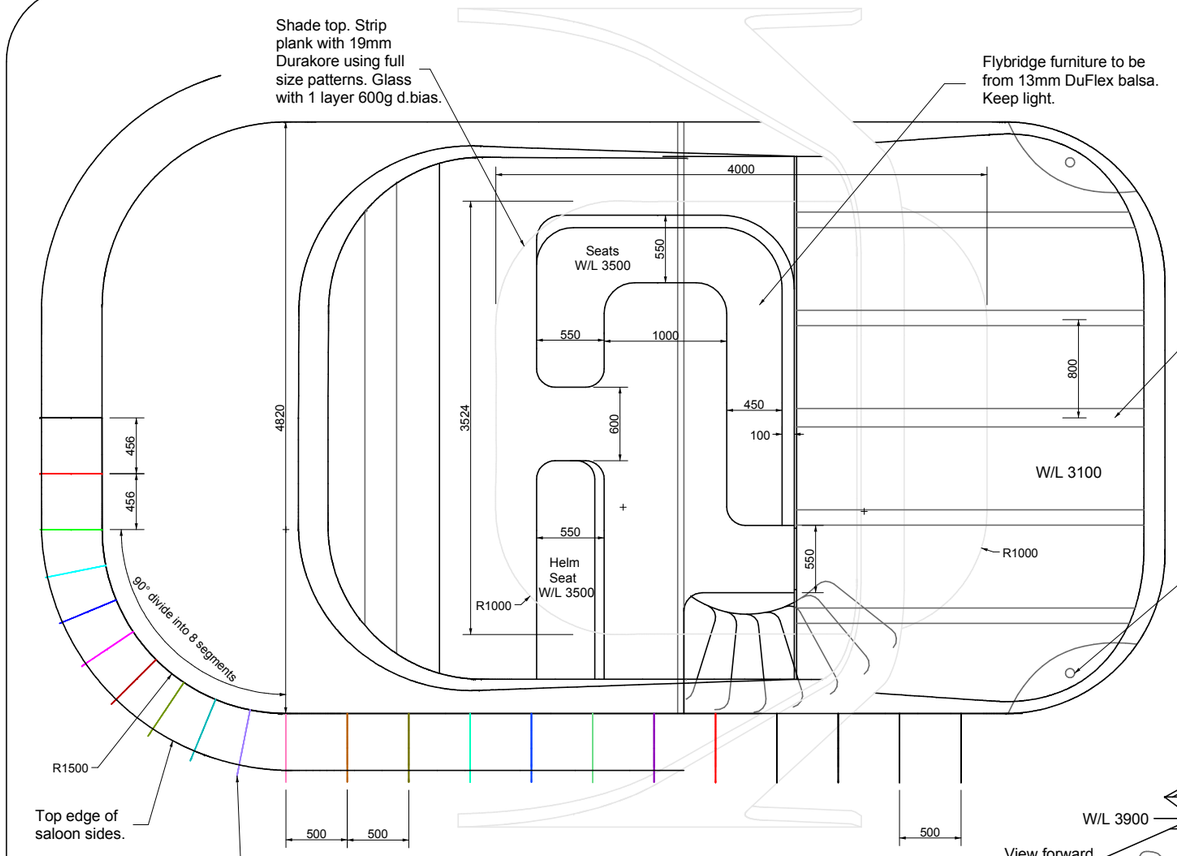

Flybridge Layout

Saloontop Brow is made from 19mm strip planked Durakore glassed with 1 layer 600 g d. bias. Use full size plots supplied to make temporary moulds. Set out as shown above (either on the boat or seperately on the floor) using colour coding for positioning.

Flybridge floor stiffeners at 800mm centres.

Flybridge support posts 60mm s/s. Double DuFlex over posts.

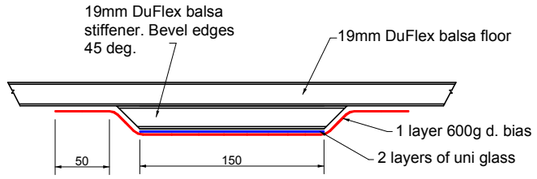

Flybridge floor stiffeners are made from 19mm DuFlex balsa. Glass 2 layers of uni 150mm wide then glue and tape to underside of floor with 1 layer 600g d.bias lapping 50mm.

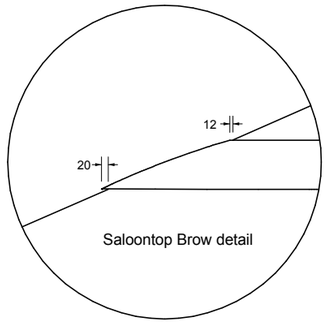

Detail 'A'

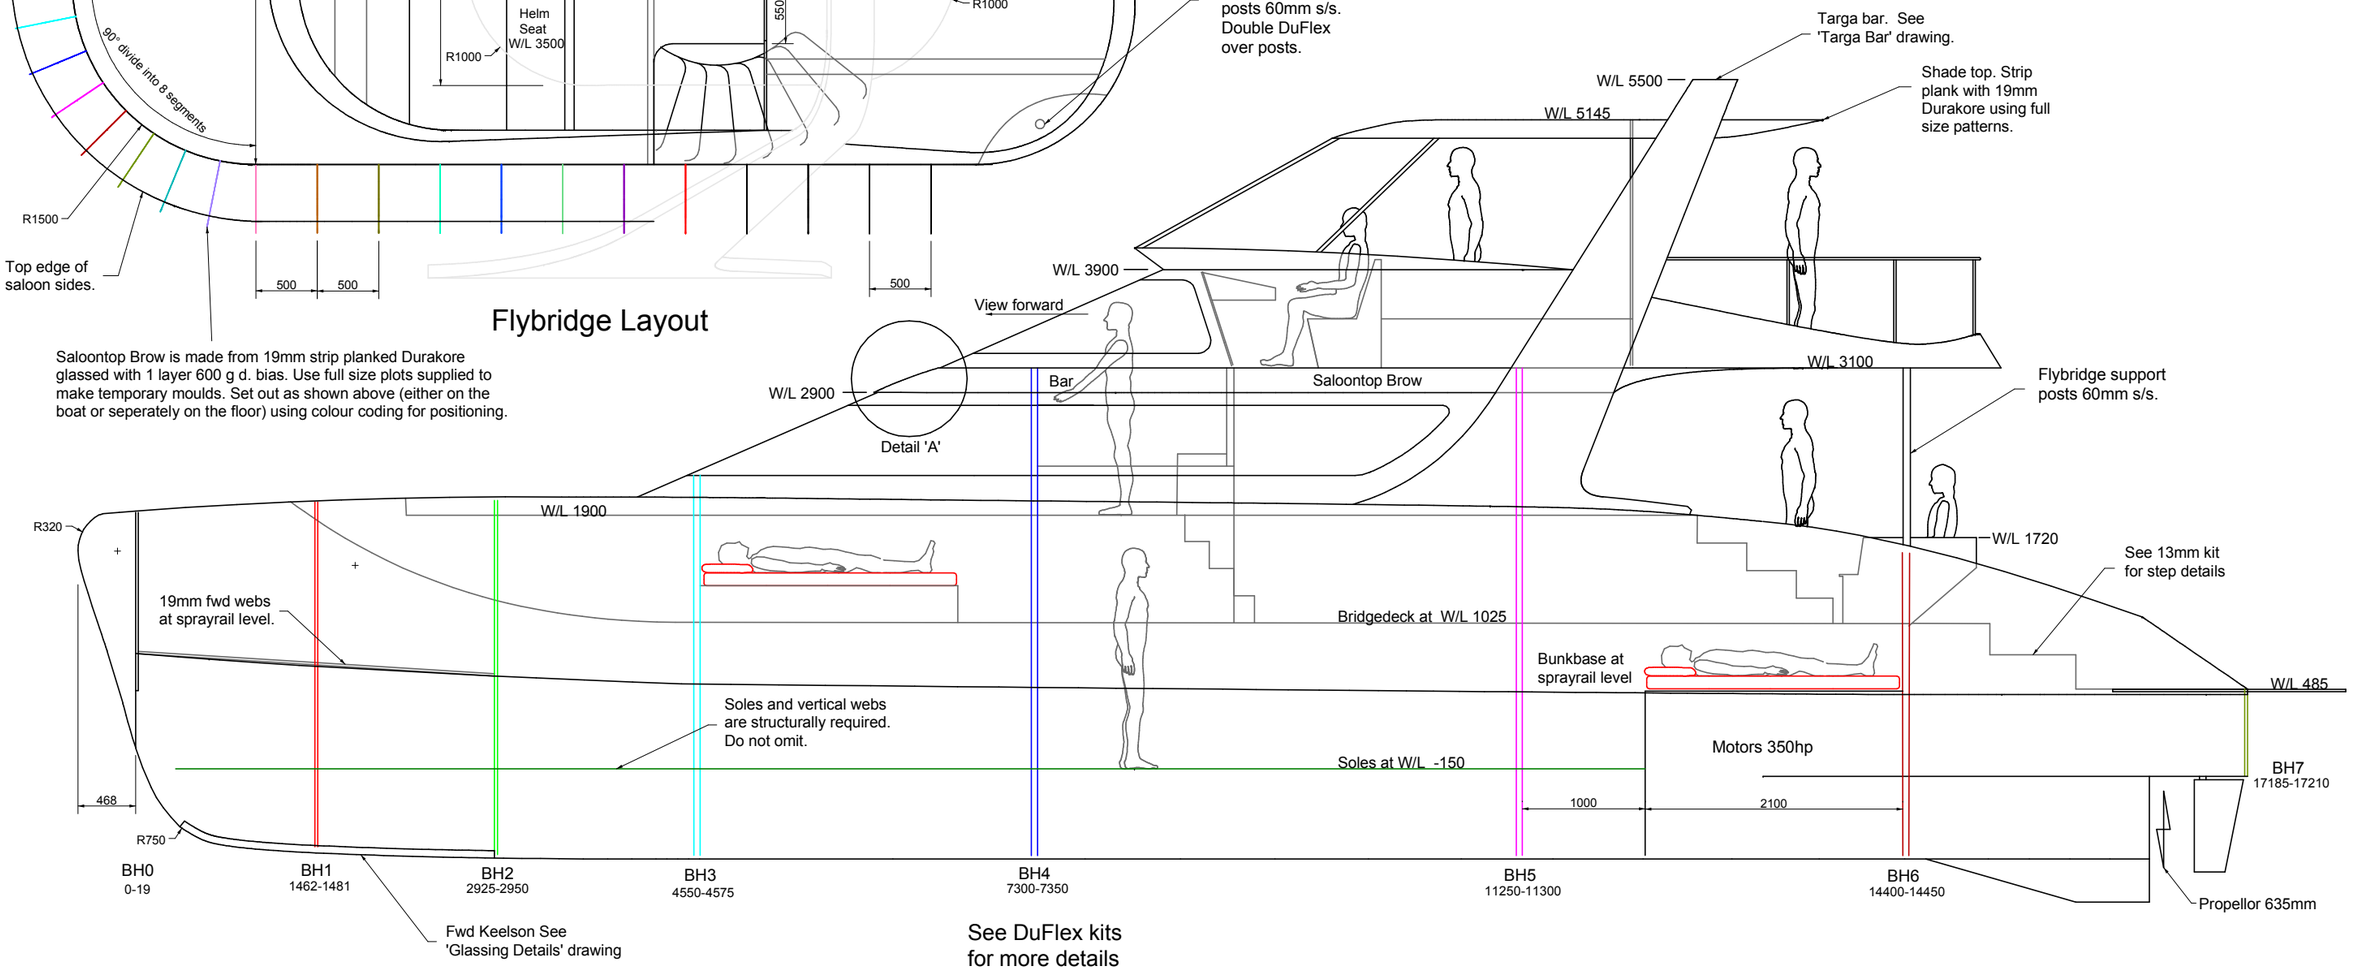

See DuFlex kits for more details

Scale 1:50

Schionning Designs Australia
Ph/fax: (int.61) 0500 555 955
www.schionningdesigns.com.au
email: jeff@schionningdesigns.com.au

Drawn By: Mark Stephens
MarineCad Services
Email:stephens@key.net.au

These plans are for the construction of one boat only. They are not to be used for any unauthorised purpose.

Prowler 580

Longitudinal Layout

All dimensions in millimetres.

Last Modified: 20/6/2002